






RESIBLOCK

Sealing, Stabilising, Protecting Paving

RESIFIX COMMERCIAL

APPLICATION SUMMARY

- 1 Spread RESIBLOCK RESIFIX *COMMERCIAL* evenly over the paved surface. Using a Resiblock sand squeegee sweep RESIBLOCK RESIFIX into joints.
- 2 Once a substantial area of paving has been swept, use a rubber-soled plate compactor over the units in overlapping passes.
- 3 Brush more RESIBLOCK RESIFIX *COMMERCIAL* into the joints and compact same area again. Continue procedure until all joints are full. Coverage will vary with size and shape of paver, as well as joint width. Remove all excess RESIBLOCK RESIFIX *COMMERCIAL* from the face of the pavers, and to the bottom of the chamfers. Excess RESIFIX *COMMERCIAL* left on the surface will be difficult to remove.
- 4 Activate the system by flooding with water. **DO NOT** use a pressure washer.

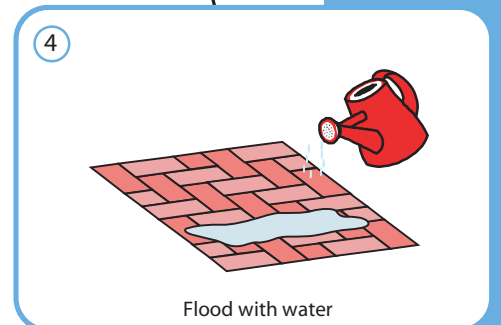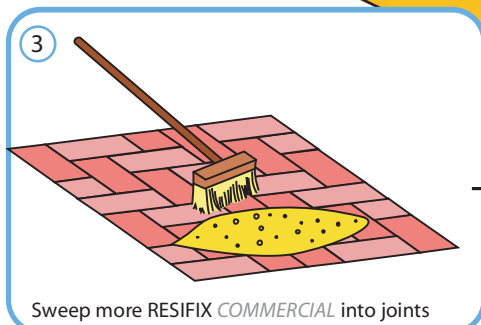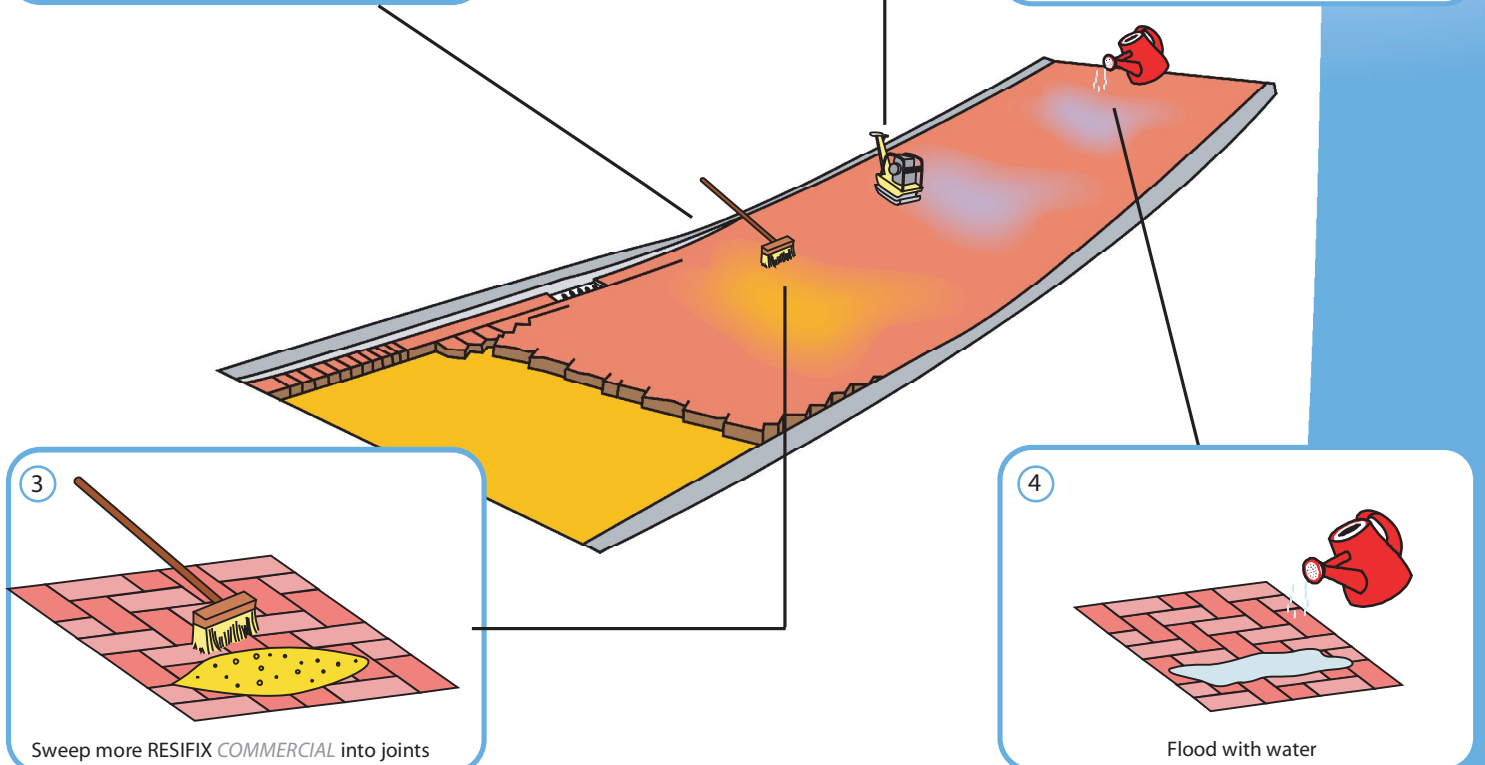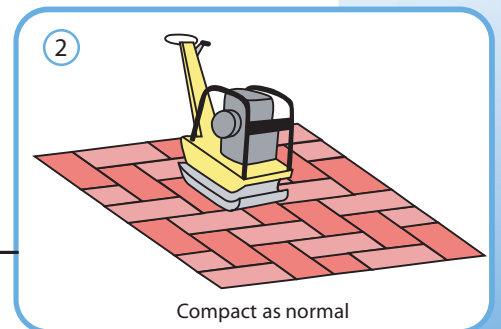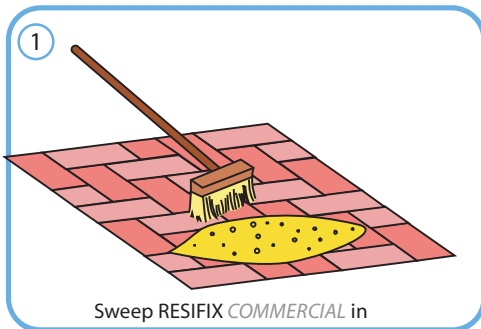

See reverse for further summary notes

RESIFIX COMMERCIAL

APPLICATION SUMMARY

On new projects, ensure RESIBLOCK RESIFIX *COMMERCIAL* is installed simultaneously with pavement construction, on a daily basis. **DO NOT WAIT** until project is complete.

1. Make sure the surface is dry and free from detritus.
2. Ensure that RESIBLOCK RESIFIX *COMMERCIAL* is only applied when there is no risk of rain prior to compaction.
3. Do not apply if it is expected that temperatures will fall below 5°C within 12 hours after application.
4. Spread RESIBLOCK RESIFIX *COMMERCIAL* over paved surface evenly. Using a RESIBLOCK sand squeegee sweep RESIBLOCK RESIFIX *COMMERCIAL* into joints with a slight pounding motion. Once a substantial area of paving has been swept, use a rubber soled plate compactor over the pavers in overlapping passes. Brush more RESIBLOCK RESIFIX *COMMERCIAL* into the joints and compact same area again. Continue procedure until all joints are full and RESIBLOCK RESIFIX *COMMERCIAL* can no longer be vibrated into them.
5. Coverage is identical to conventional kiln dried jointing sand.
6. Carefully remove all excess RESIBLOCK RESIFIX *COMMERCIAL* from the face of the pavers and to the bottom of the chamfers. Excess RESIBLOCK RESIFIX *COMMERCIAL* left on the surface will be difficult to remove.
7. Remove final traces of RESIBLOCK RESIFIX *COMMERCIAL* and activate the system by flooding with water. DO NOT use a pressure washer, ensure joints are saturated. Repeat process if necessary where water has not been fully absorbed into all joints.
8. A RESIBLOCK RESIFIX *COMMERCIAL* pavement is safe to walk on immediately, but ideally should be left to dry.
9. Ideally RESIBLOCK RESIFIX *COMMERCIAL* should not be subjected to cleaning regimes for 28 days.

FOR FURTHER INFORMATION OR TECHNICAL ASSISTANCE CONTACT

RESIBLOCK LTD

Resiblock House
Archers Fields Close
Basildon

Essex, SS13 1DW

Tel: (+44) 01268 273344 Fax: (+44) 01268 273355

email: technical@resiblock.com

www.resiblock.com



Sponsors of
The Institute of Highway Incorporated Engineers

www.paving.org

Associate Members Of Interpave Ltd

Please note this summary is offered as a general guide only and does not replace the current published Application Guidelines which must be read prior to application together with the current Material Safety Data Sheet.